


FIG. 1

System Sj

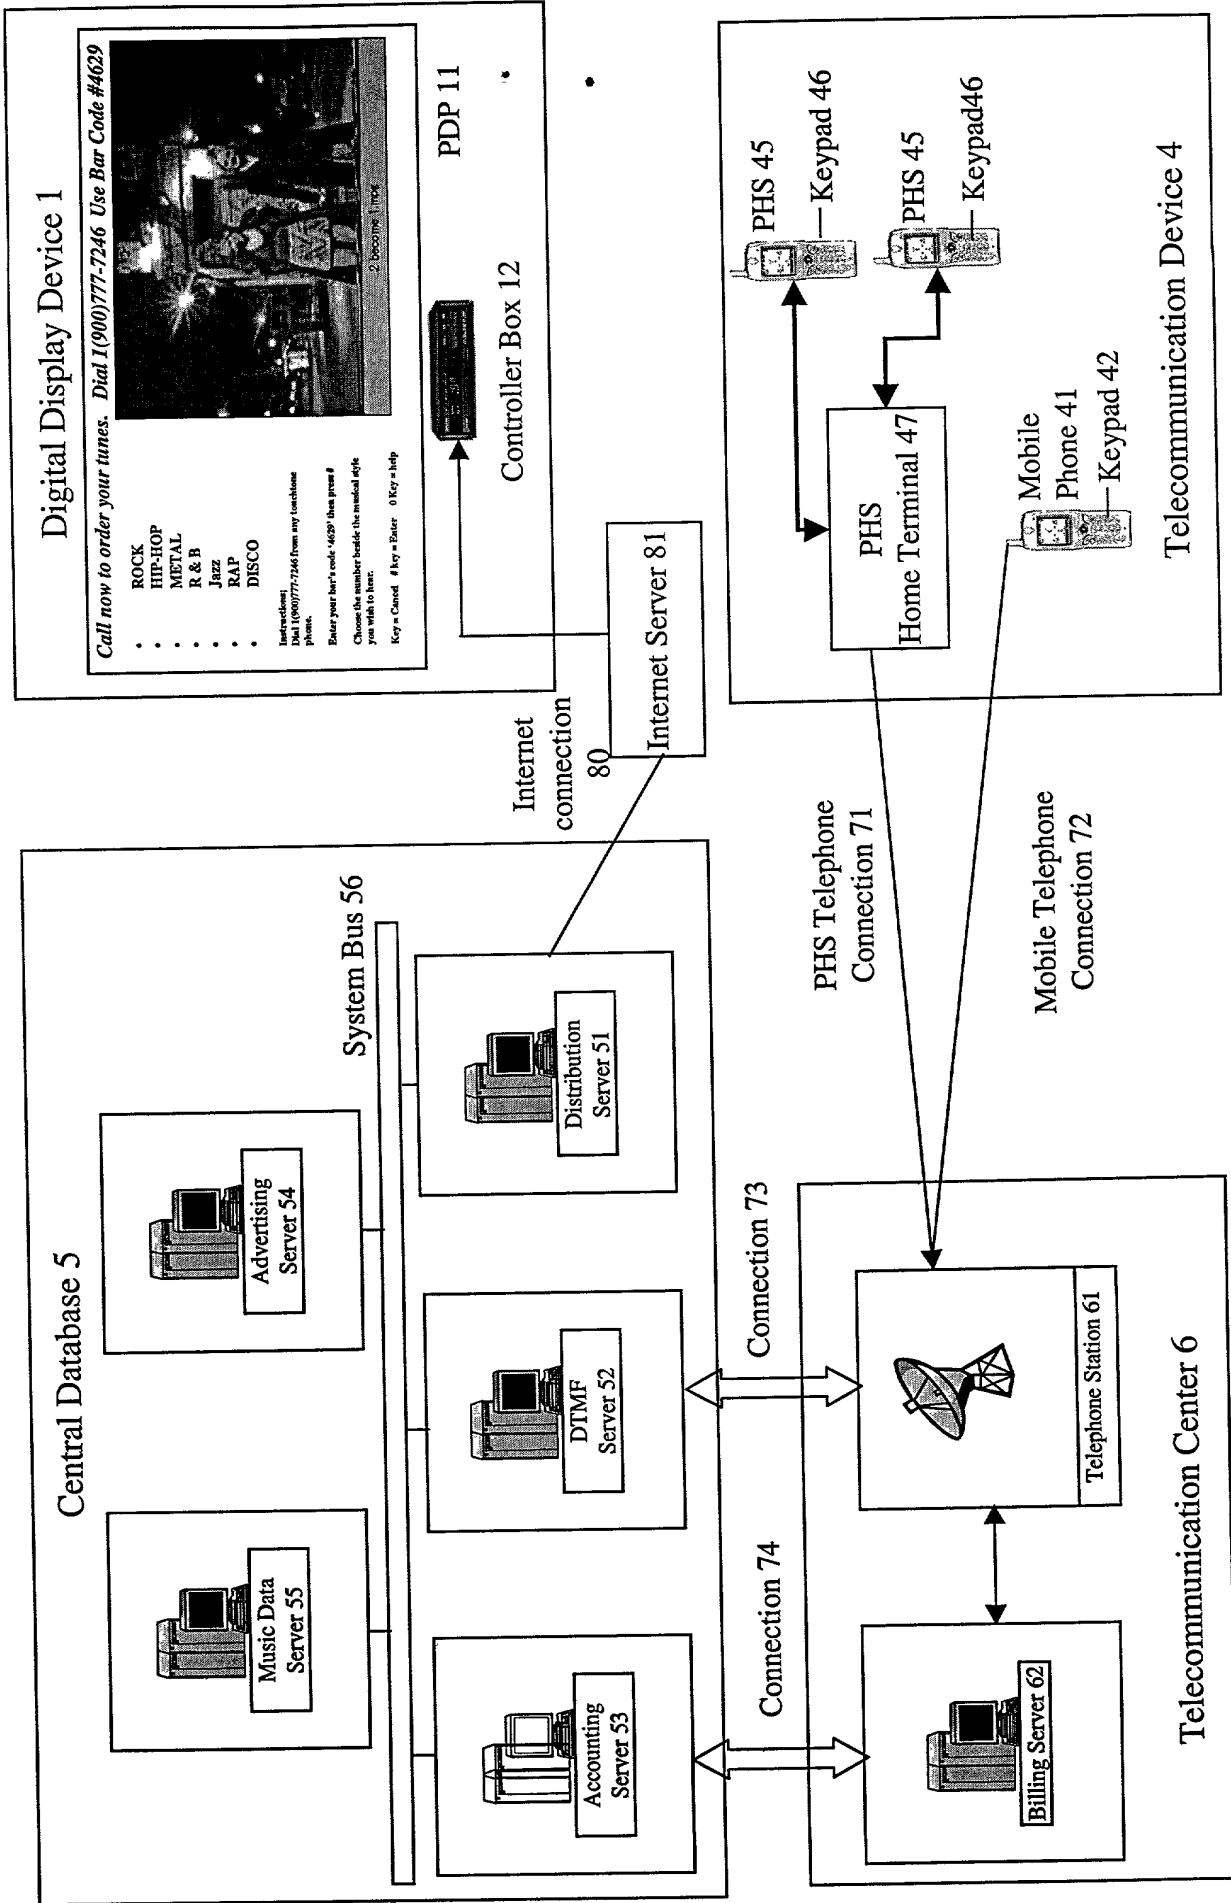

Third party charge phone number 21

Bar code 22

Call now to order your tunes. Dial 1(900)777-XXXX Use Bar Code #4629

1.ROCK

2.HIP-HOP

3.METAL

4.R&B

5.JAZZ

6.RAP

7.DISCO

Instructions;

Dial 1(900)777-7246 from any
touchtone phone.

Enter your bar's code '4629' then press #


Choose the number beside the musical
style you wish to hear.

Key = Cancel # key = Enter 0 Key = help

Navigation
menu 23

—202

201

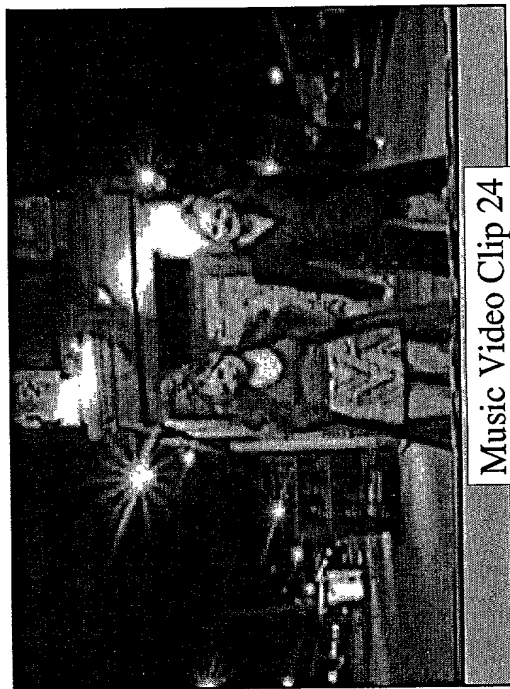

Music Video Clip 24

203

PDP11

FIG. 3 **JUKEBOX MODE**

Third party charge phone number 21

Bar code 22

Call now to order your tunes. Dial 1(900)777-XXXX Use Bar Code #4629

1.ROCK

2.HIP-HOP

3.METAL

4.R&B

5.JAZZ

6.RAP

7.DISCO

Navigation
menu 23

Instructions;

Dial 1(900)777-7246 from any
touchtone phone.

Enter your bar's code '4629' then press #





Choose the number beside the musical
style you wish to hear.

Key = Cancel # key = Enter 0 Key = help

—212

211

Advertisement25

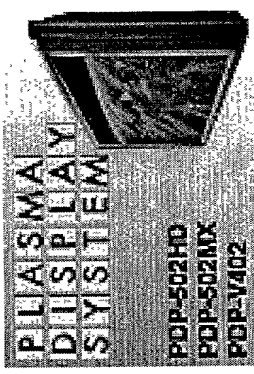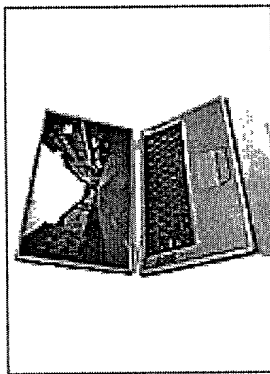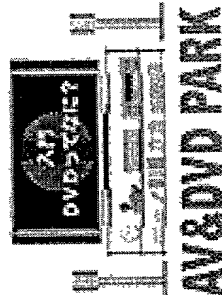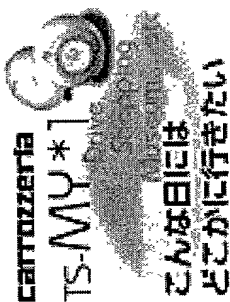

213

PDP11

FIG. 4 COMMERCIAL MODE

Third party charge phone number 21


Bar code 22

Call now to order your tunes. Dial 1(900)777-XXXX Use Bar Code #4629

- Instructions;
Dial 1(900)777-7246 from
any touchtone phone.
- Enter your bar's code '4629'
then press #
- Choose the number beside
the musical style you wish to
hear.
- Key = Cancel
 - # key = Enter
 - 0 Key = help
- Navigation
menu 23



Music Video Clip 24

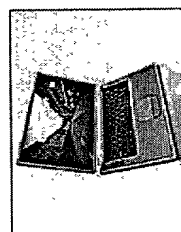

224

Advertisement25



FIG. 5

MIX MODE

PDP11


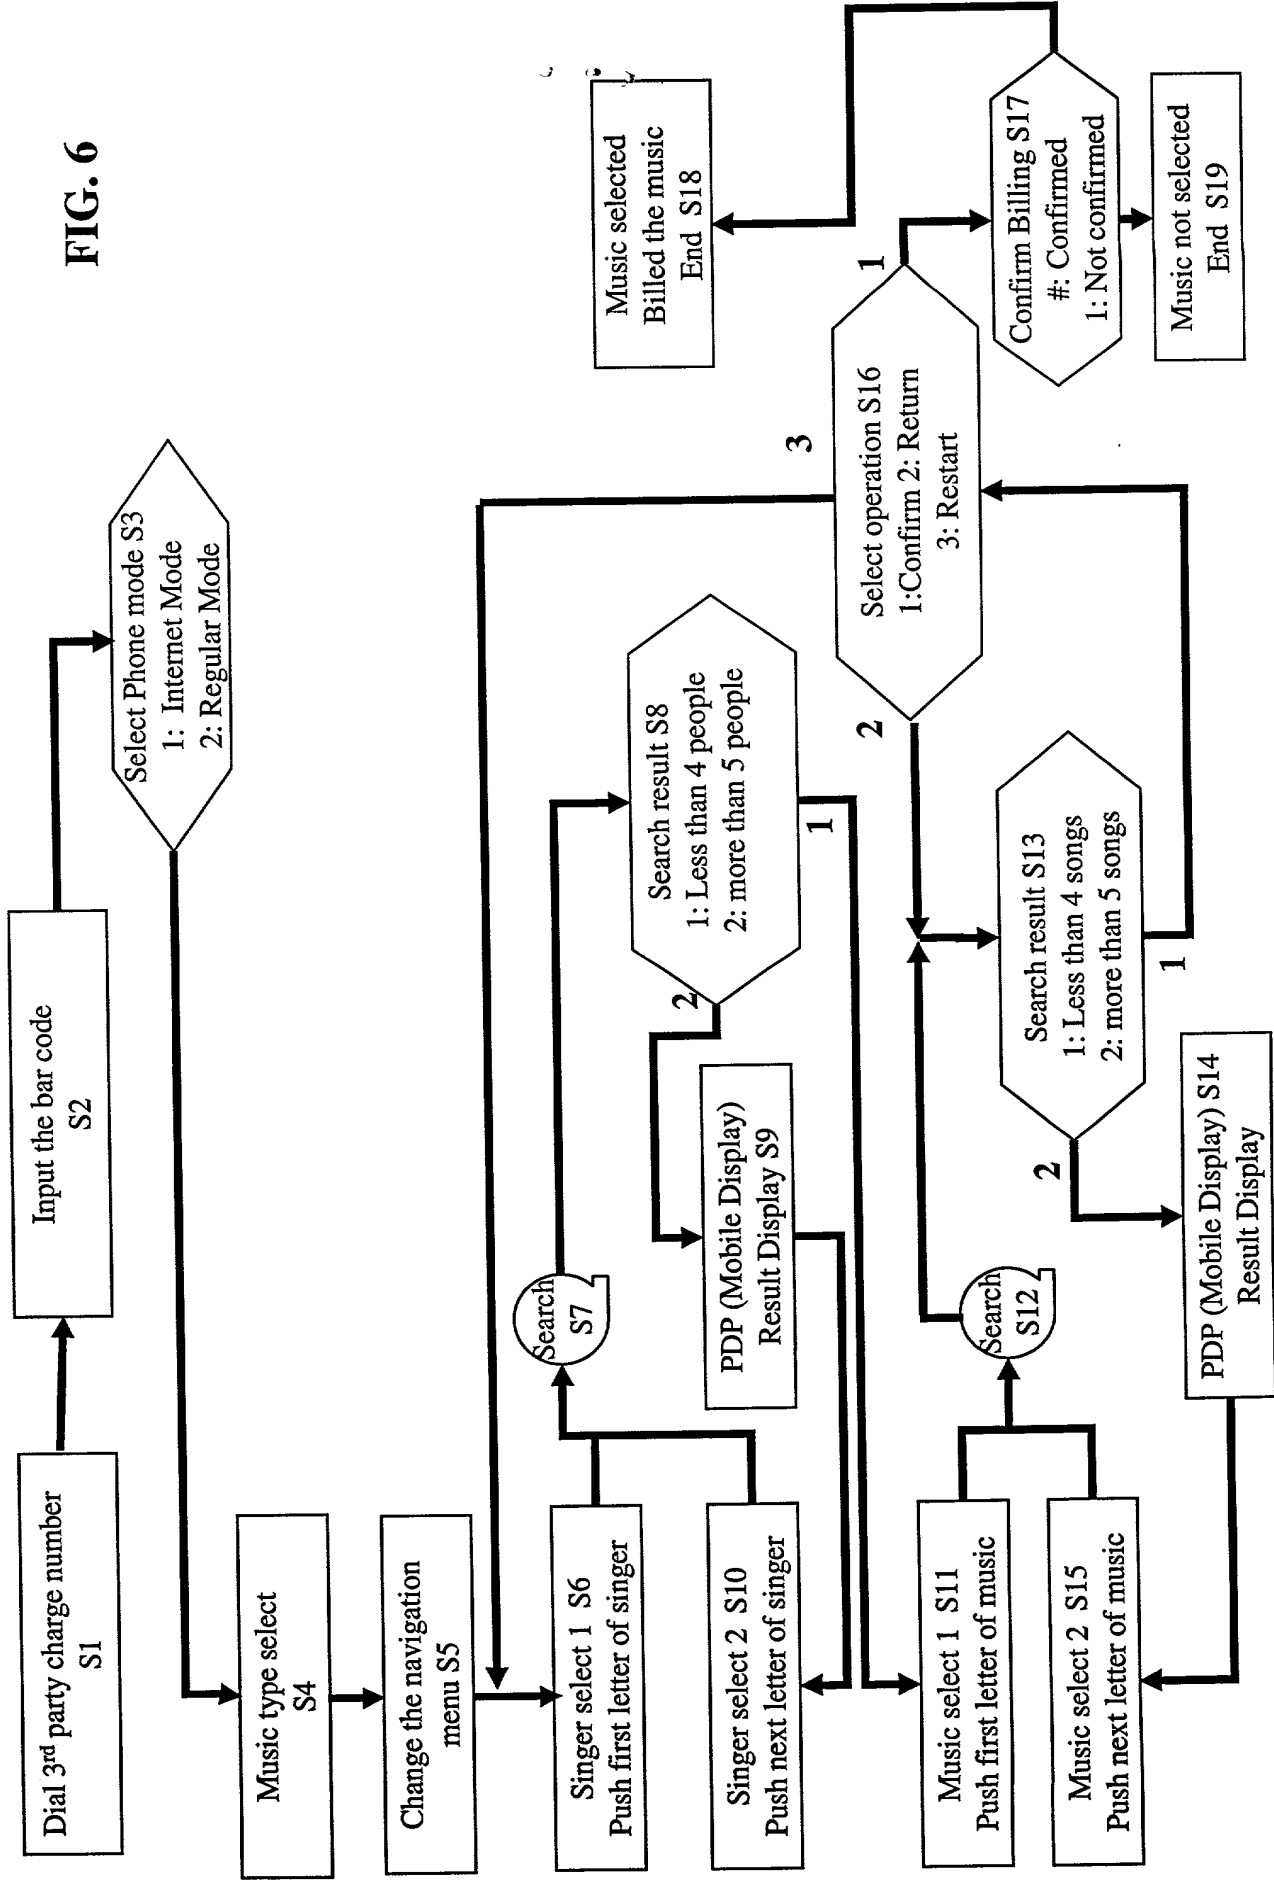


FIG. 7



System Sc

FIG. 8

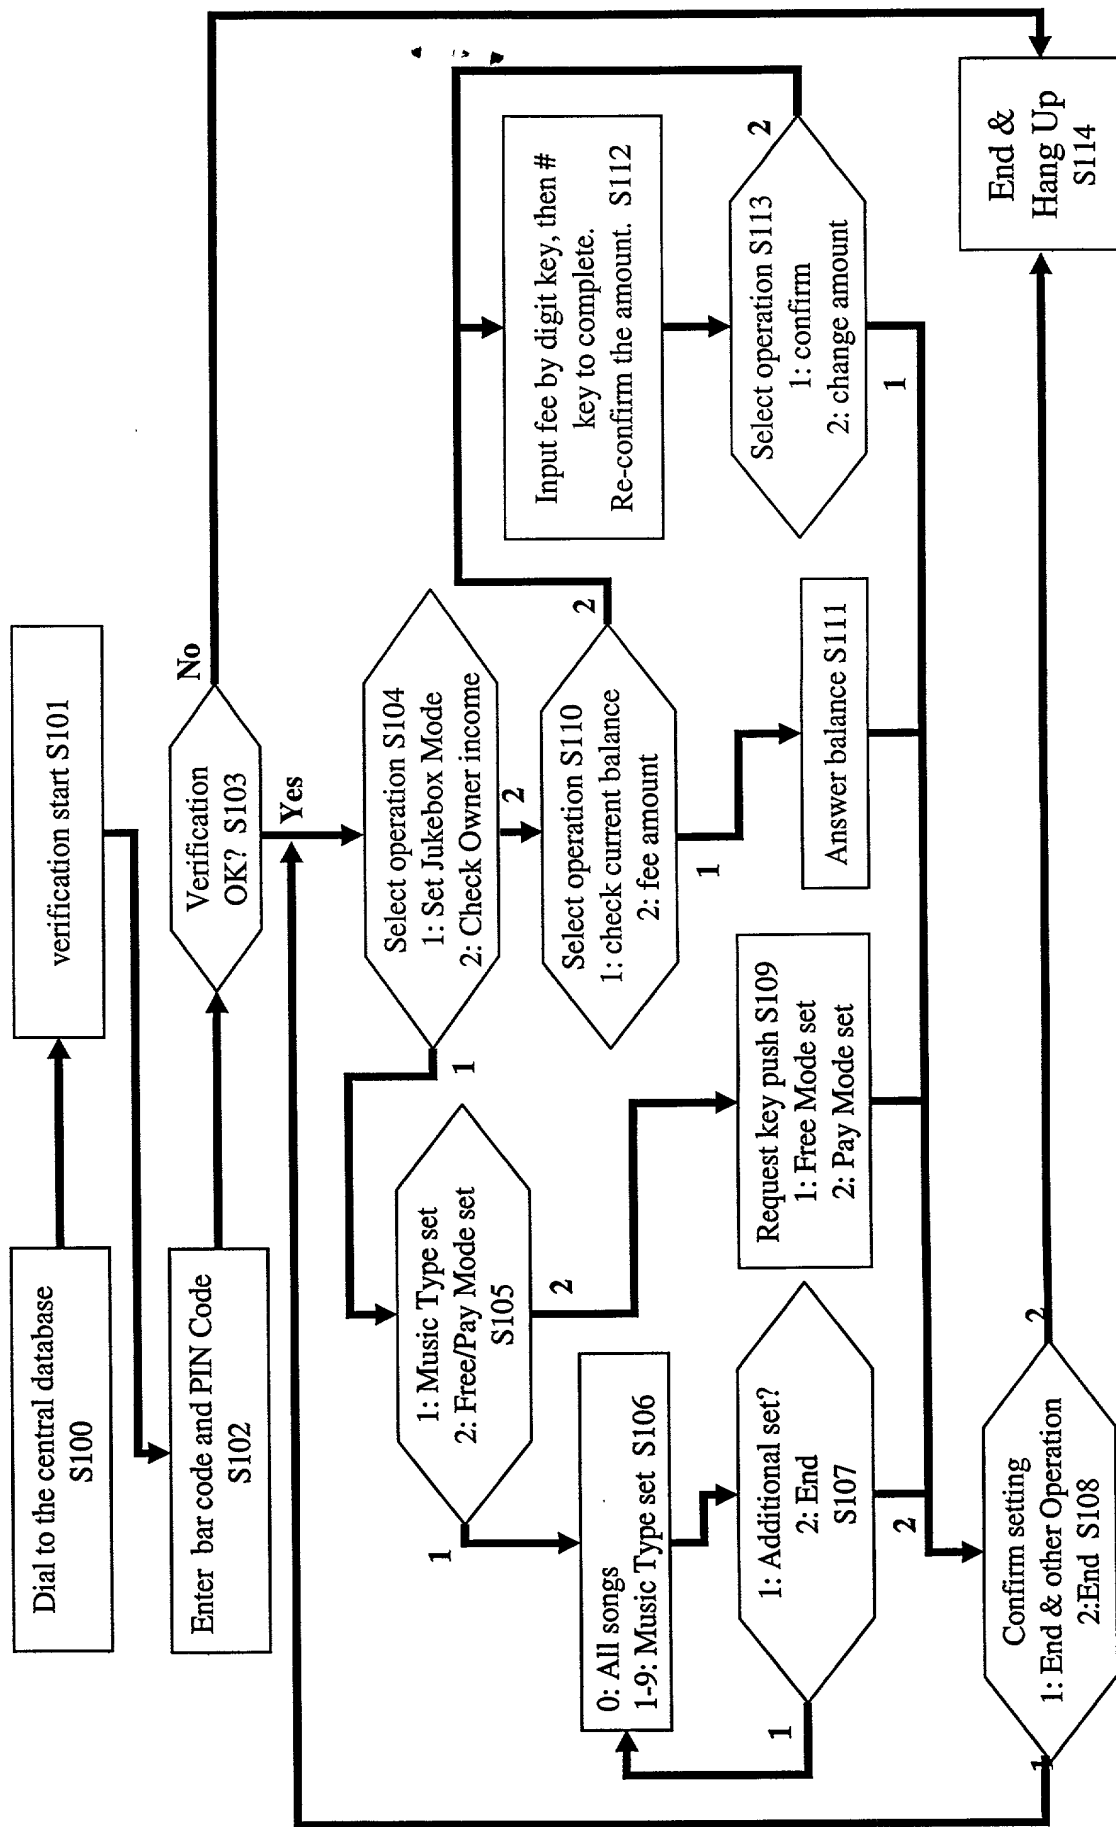